


CIRCUIT UNDER DASHED LINE IS DISPLAY SUB PCB
DISPLAY SUB PCB AND MAIN PCB ARE LINKED BY
ONE 30 PIN HEADER BERG AND TWO SEVEN PIN HEADERS
k1 k2 and k3

note this link of 555 is a wire at pin 3

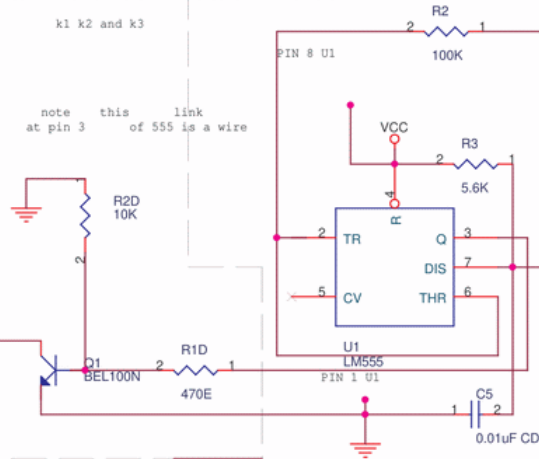

THIS DOCUMENT IS A CONTROLLED COPY
AND SHOULD NOT BE GIVEN FOR XEROX

delabs design
delabs-circuits.com
delabs.net
Intellectual Property